

Specification of the Trail Clamp may differ to the one shown.



1. With the tyre valve positioned away from the tubes welded to the inside of the Trail Clamp disc, hook the arm behind the wheel.



2. With the arm hooked behind the wheel, move the arm of the Trail Clamp in so that it lies flat against the tyre.



3. With the lock in the unlocked position, slide the return arm in around the rear of the tyre and lock by pressing the plunger lock in until it clicks.

Note:

To remove the clamp, insert the key, rotate $\frac{1}{2}$ turn and gently pull on the key until the lock pops out.

We have taken every care in the design and manufacture of this security device and we believe that it is an effective deterrent. However we cannot guarantee that it will resist the efforts of the most determined Thief, and as such we do not accept any liability for loss or damage caused by theft, vandalism or other illegal activity against property to which this device is fitted.

Bulldog Security Products

Units 1 - 4 Stretton Road, Much Wenlock, Shropshire, TF13 6DH.
Tel: 01952 728171 Fax: 01952 728117
Email sales@bulldogsecure.com www.bulldogsecure.com

Lock Lubrication.

IMPORTANT - To ensure free movement of the lock, spray lock mechanism with WD40 (or equivalent) minimum every four months.