



Fitting Instructions

TOWBAR F92C
For FORD MONDEO
SALOON AND HATCH
(2001-)

MATERIALS


A	1	Cross Bar with European facing to 94/20/EC A50-1
C	1	Right Hand Side Arm
D	1	Left Hand Side Arm
E	4	M10 x 110 Bolts, Nuts, Lock Washers and Ø30 Flat Washers
E1	4	Bushes (17mm O.D. - 79mm long)
F	2	M10 x 45 Bolts, Nuts, Lock Washers and 4 Ø20 Flat Washers
H	2	M12 x 40 Bolts, Nuts and Lock Washers and Ø25 Flat Washers
I	1	ZEP35 Electrical plate (not shown)
CB	2	M16 x 50 Coupling Bolts, Nuts and Lock Washers

FITTING

1. Remove plastic panel from underside of vehicle (3 large nuts). Release lower edge of bumper (4 large nuts on underside of bumper).
2. Lower exhaust and remove heat shield to gain access to the chassis rails. Insert Bushes (E1) on Bolts (E) with Large Flat Washers under bolt heads into the frame through the adjacent 'keyholes' and loosely attach Side Arms (C) and (D).
3. Cut bumper extension as shown below. **Note:** The bumper extension is available from Ford as a separate clip on item (part no. 1115579). **NOT ZETEC S.**
4. Pull down lower edge of bumper and insert Cross Bar (A). Loosely attach Cross Bar (A) to rear panel and Side Arms (C) and (D) using Bolts (F) at upper mountings and Bolts (H) on lower mountings. **Tighten all Bolts.**
5. Re-mount heat shield and exhaust. Re-mount lower bumper edge. Re-fit plastic panel.

Note: This towbar must be used with either a Witter Towball (part number Z11) or Class A50-1 or A50-X towball dimensionally conforming to A50-1 with a 'D' and 'S' value greater than or equal to that of the towbar. Please refer to the vehicle specification for the trailer weight and nose limits, which **must be observed**.

Recommended torque settings: Grade 8.8 bolts: M10 - 53 Nm, M12 - 95 Nm, M16 - 214 Nm

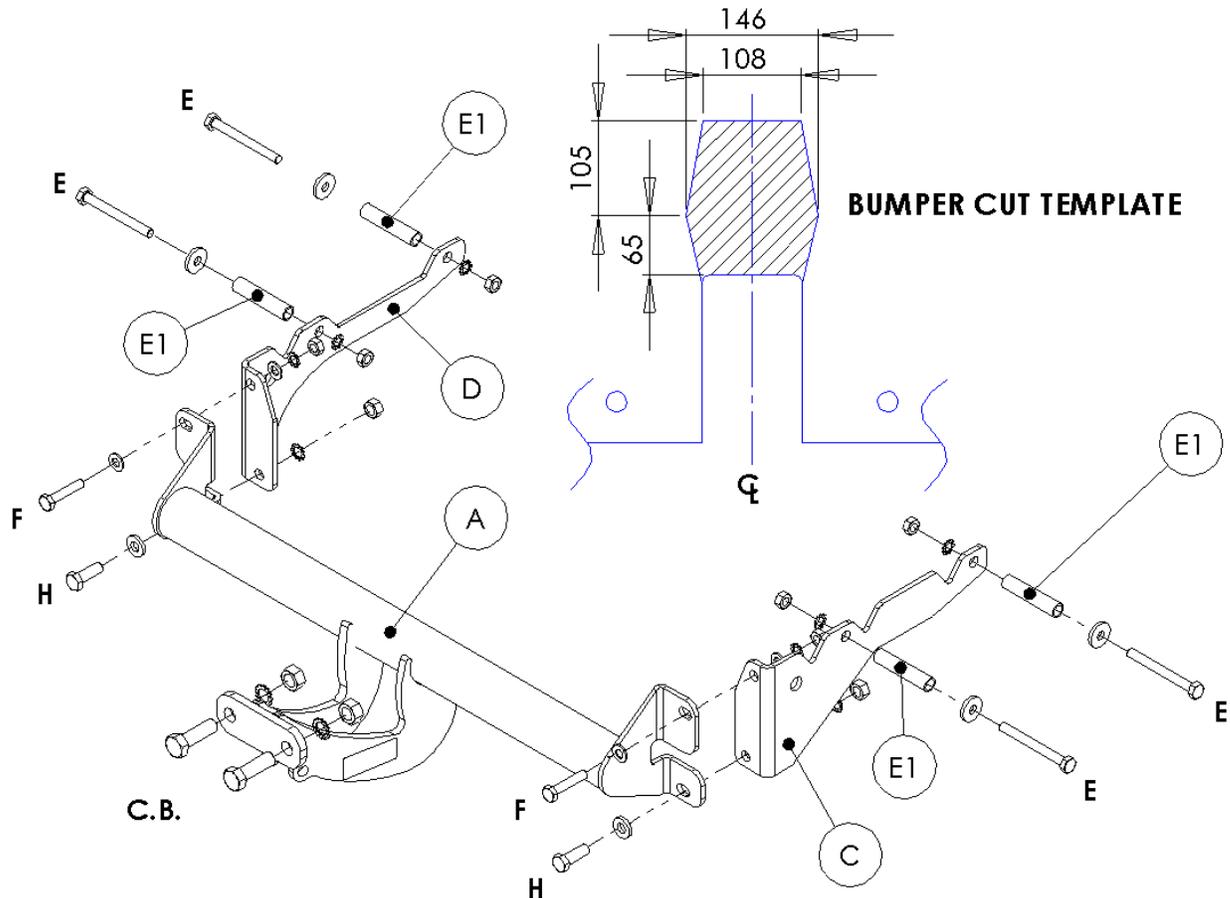



Notice de montage

ATTELAGE
Pour FORD MONDEO F92C
BERLINE ET 5 PORTES
(2001-)

MATERIEL

A	1	Traverse conforme à la norme européenne 94/20/EC A50-1
C	1	Bras latéral droit
D	1	Bras latéral gauche
E	4	Boulons M10 x 110 x 1,5 mm, écrous, rondelles frein et rondelles plates (Ø 30mm)
E1	4	Entretoises (Ø 17mm, longueur 79mm)
F	2	Boulons M10 x 1,5mm x 45, écrous, rondelles frein et 4 grandes rondelles plates (Ø 20mm)
G	2	Entretoises
H	2	Boulons M12 x 40 x 1,75mm, écrous et rondelles frein
CB	2	Boulons d'accouplement M16 x 50 x 2,0mm, écrous et rondelles frein


MONTAGE

1. Enlever le panneau en plastique du dessous du véhicule (3 grands écrous). Libérer le bord inférieur du pare-chocs (4 grands écrous sur le dessous de pare-chocs).
2. Abaisser l'échappement et enlever le bouclier thermique pour accéder aux longerons. Insérer les entretoises (E1) sur les boulons (E) avec les grandes rondelles plates sous les têtes de boulon dans le longeron par les « trous d'accès » adjacents et attacher sans serrer les bras latéraux (C) et (D).
3. Découper la rallonge de pare-chocs comme illustré ci-dessous. **Remarque** : La rallonge de pare-chocs est disponible auprès de Ford en tant qu'élément à clipser séparé (pièce n° 1115579). **PAS ZETEC S.**
4. Abaisser le bord inférieur du pare-chocs et insérer la traverse (A). Attacher la traverse (A) sans serrer au panneau arrière et aux bras latéraux (C) et (D) en utilisant la visserie (F) sur les fixations supérieures et la visserie (H) avec les entretoises (G) sur les fixations inférieures. **Serrer tous les boulons.**
5. Remonter le bouclier thermique et l'échappement. Remonter le bord inférieur du pare-chocs. Réinstaller le panneau en plastique.

Remarque : Cet attelage doit être utilisé avec une boule de remorquage Witter (référence produit Z11) ou une boule de remorquage Classe A50-1 ou A50-X se conformant dimensionnellement à A50-1 avec une valeur 'D' et 'S' supérieure ou égale à celle de l'attelage.

Veillez vous reporter aux données techniques du véhicule pour les limites de masse et du poids tractable admis sur la boule, **lesquelles sont à observer.**

Couples de serrage recommandés : M8 - 27Nm, M10 - 53 Nm, M12 - 95 Nm, M14 - 150 Nm, M16 - 214 Nm

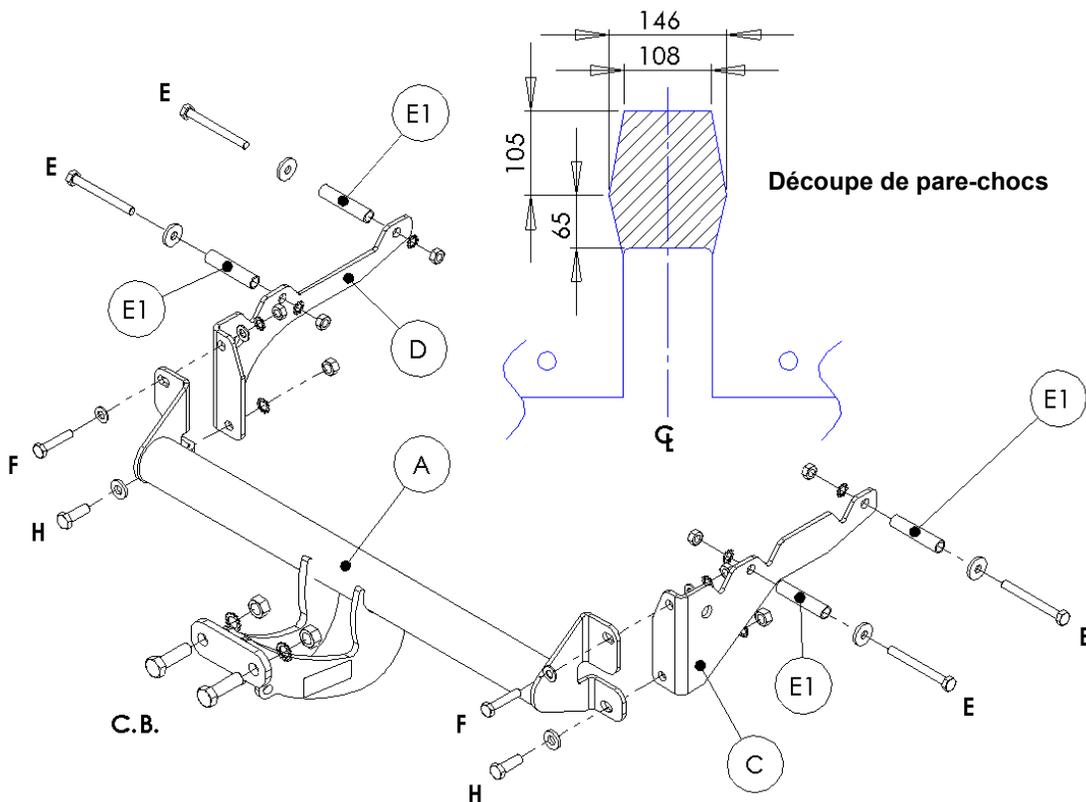

WITTER TOWBARS

Support technique

Numéro Vert : 0 805 102 860



W0001F92C-FIT\$011103170000