




# Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting

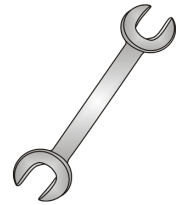

Issue 3

## TFD17 FORD FIESTA 2008 – 2017 / FIESTA 2017> / Ka+ 2017>


Item	Qty	Description	Item	Qty	Description
A	1	TFD17 Crossmember	E	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Handed Side Arms	F	4	M10 x 35 Bolts & S/P Washers
C	2	3mm Spacer Plates	G	4	M10 x 45 Bolts & Nyloc Nuts
D	1	Extension	H	2	M12 x 40 Bolts & Nyloc Nuts
			J	1	M12 x 120 Bolt & Nyloc Nut
			K	8	10 x 30 Flat Washers
			L	4	12 x 25 Flat Washers
			M	1	30mm O/D x 60mm Long Spacer Tube
			N	2	16 x 27 Flat Washers

### BUMPER REMOVAL:

1. Remove the rear bumper, **Fiesta**: two vertical fixings and three in each wheel arch. **Ka+**: four vertical fixings and three in each wheel arch, two in the boot shut panel, remove rear light clusters to reveal one more bumper fixing either side to remove. Release bumper tips from vehicle body and pull rearwards. (disconnect any necessary wiring looms)
2. Remove the bumper impact beam (This is not refitted with the Towbar) replace nuts back onto the studs.

### TOWBAR INSTALLATION:

3. Locate Items **B** into each correct chassis and loosely fix in place using item **F** with item **K**.
4. Using item **G** with Item **K** fix item **A** between items **B**. (Note: some models may require Items **C**).
5. Using item **H** and Item **J** with Items **L** fix item **D** to item **A** ensuring Item **M** is fitted between the lower mounting point.
6. Fully tighten all fixings and ensure the Towbar is rigid, square and secure.
7. Cut the bumper centrally as per the sketch below.
8. Using item **E** and item **N** (Note: Item **N** must be fitted between the bolt and the towball) fix your desired ball bracket and wiring plate (not supplied in this kit) to the mounting plate and fully tighten.
9. Refit the rear bumper.

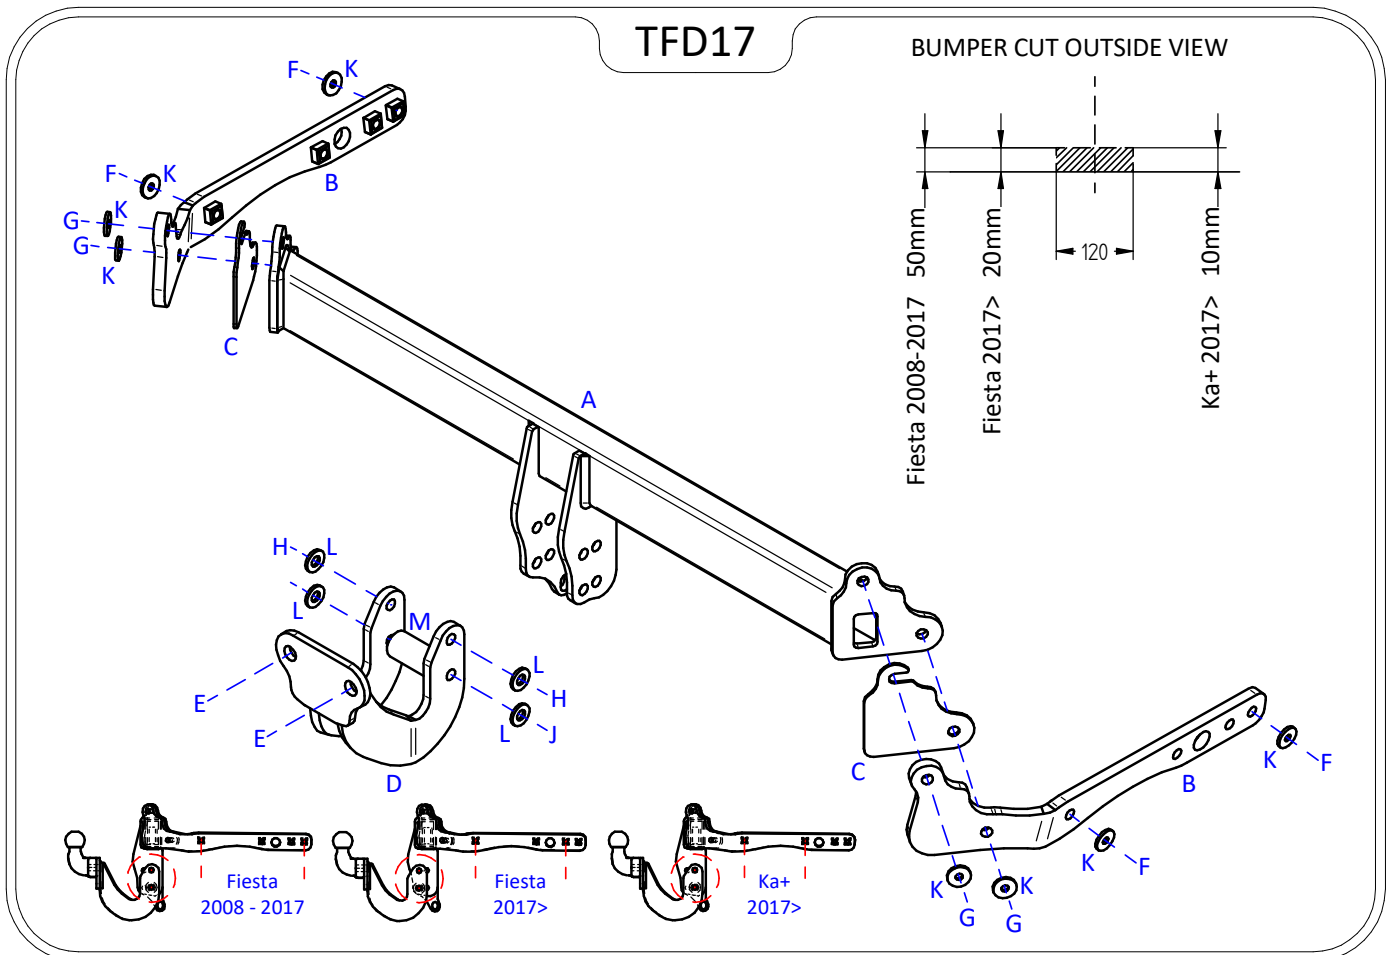

### Note:

1. Torque Settings see notes overleaf.
2. Nose load limits and vehicle manufacturers trailer / caravan weight limits must be observed.