


Parts List:

Part No:	Description:	Size:	Torque	Qty:
1	Crossbar with European facing to 94/20/EC A50-1			1
2	Coupling Packer			1
3	Sidearms			2
4	Bolt (x6) + Nyloc Nut (x4) + Lock Washer (x2)	M12 x 40mm x 1.75mm	95Nm	
5	Bolt + Nyloc Nut + Flat Washer	M12 x 110mm x 1.75mm	139Nm	8
6	Coupling Bolt + Nut + Washer	M16 x 50mm	214Nm	2
7	Electrical Plate			1

Fitting:

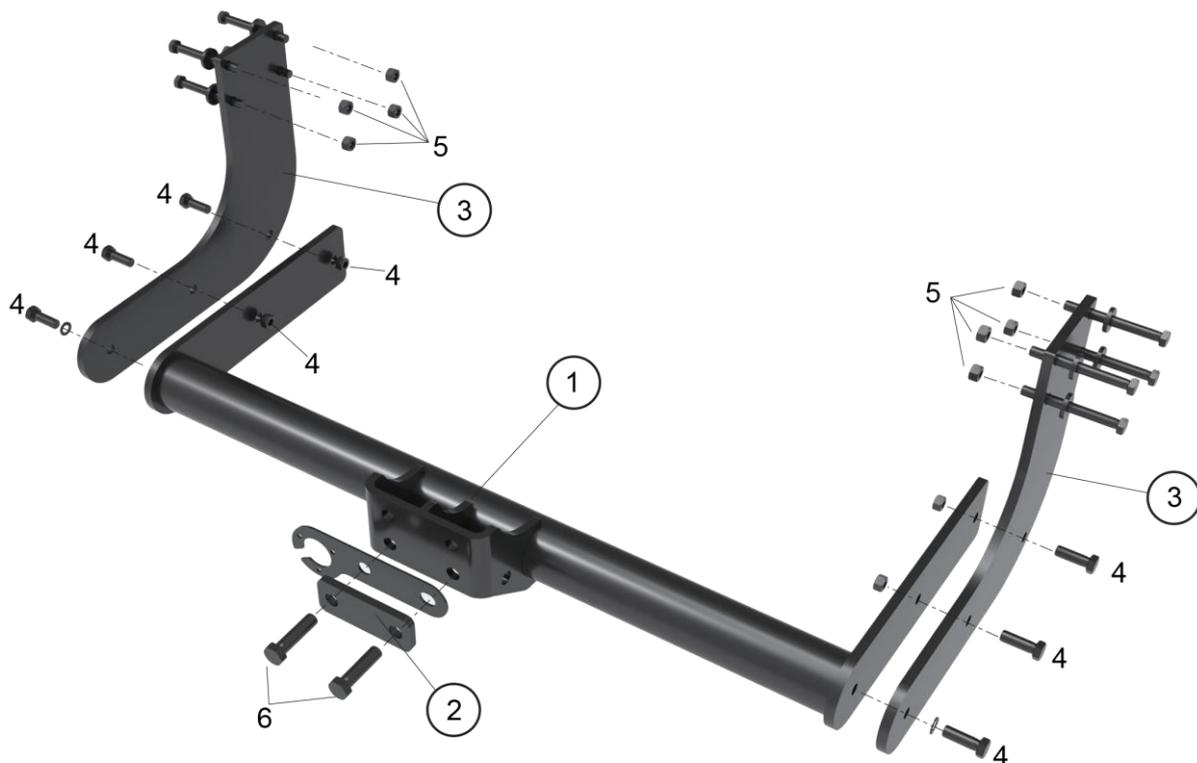

Fitting:

1. Remove bolts securing the step bracket to the chassis (4 bolts per side). Using bolts (5) & flat washers, loosely attach the sidearms (3) to the outside face of the chassis, using the existing bushed holes (as shown above).
2. Attach, but do not secure, the crossbar (1) to the sidearms (3) using bolts (4).
3. Fully tighten bolts to the recommended torque values (See table above).

Note: A fuel tank shield may be require - Refer to vehicle handbook.

Note: 2011 models may require a notch removing from the step bracket.

Note: This towbar must be used with a Class A50-1 or A50-X towball, which dimensionally conforms to A50-1 with a 'D' & 'S' value greater than or equal to that of the towbar.

****Manufacturers towing limits must be observed for towing capacity****